

## D-329

(VD4802-00-0000)

### QUICK DISCONNECT CABLE CARRIER

#### MOUNTING INSTRUCTIONS:

1. Locate the Cable Carrier "Quick-Disconnect" bracket "A" at the rear of the stationary section of the slide. Using the same holes used for the slide rear mounting bracket.
2. Attach the "Quick-Disconnect" bracket "B" to the rear of the chassis. This requires two holes to be drilled in the chassis for #10-32 screws.
3. Attach the cable.


#### BILL OF MATERIAL:

1. D-329 Cable Carrier (1)
2. Hardware package (1)


#### HARDWARE PACKAGE CONSISTS OF:

ITEM	QTY
#10-32 x 1/2 PHILIPS PHMS	4
#10-32 Keps Nuts	4

\*\*Subject to change without notice

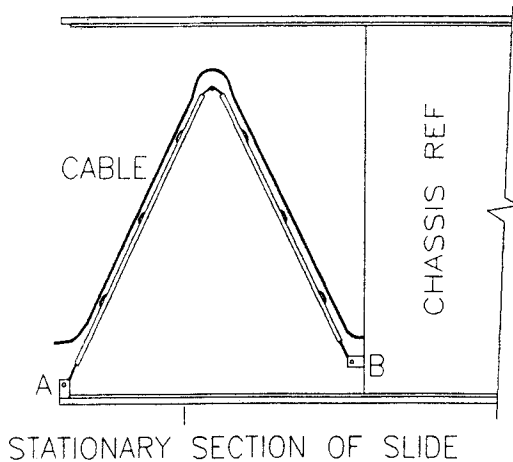

OPEN POSITION

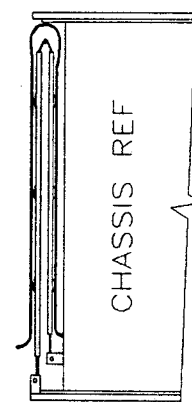

CLOSED POSITION